


SMEV COOKER

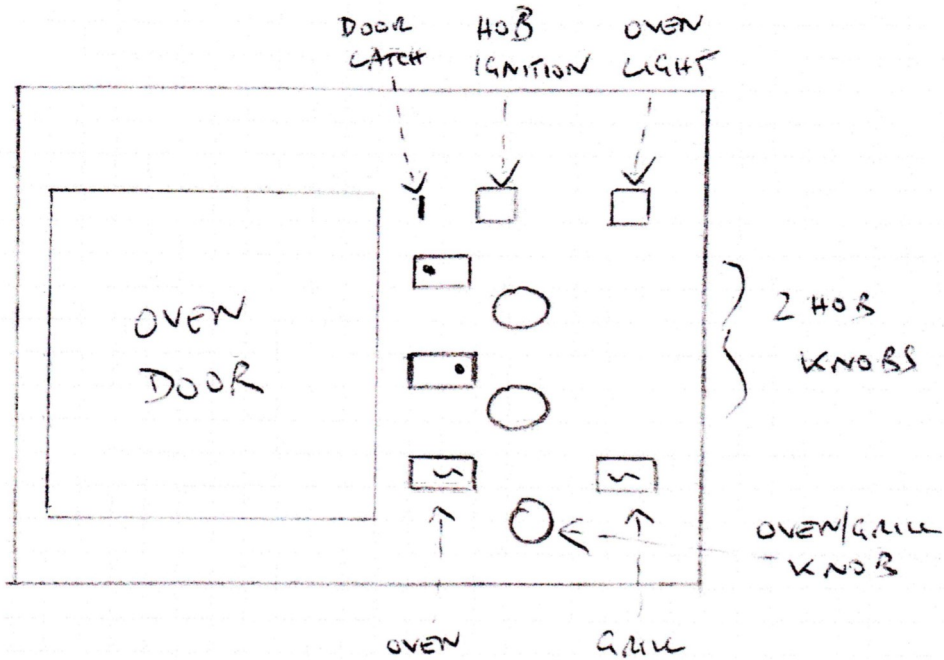

HOBBS - TO LIGHT EITHER - TURN KNOBS TO HIGH FLAME & PRESS IGNITION HOLD FOR A FEW SEC'S

OVEN & GRILL - DOOR MUST BE HORIZONTAL WHEN LIGHTING. TURN KNOBS TO EITHER OVEN OR GRILL & IT WILL AUTOMATICALLY IGNITE.

GRILL - LEAVE DOOR AT ANGLE OR YOU WILL GET ROAST TOAST

WJ
4/10

Table - How to fit it in the cockpit

To fit table support (crosspiece) ensure crouch has white 'arrow' leg on the starboard side and end of each leg is central to each drain hole. then turn the grating if necessary to ensure hole is towards the bow



To fit the crosspiece



From the stern side of the crouch keeping the crosspiece level gently insert the two pins into the plate on the side of the starboard leg of the crouch

THEN

to secure the other end of the crosspiece a pin engages with the slot in the plate of the starboard leg, and secure the port leg, and secure with the elastic

pin engages with this slot



fix the table down using the barrel bolts



pin on end of the leg locates in hole in the grating



Crosspiece is stowed in the starboard quarter berth against engine cover. end with pins towards the bow, in place using turn buckle. When stowing the table above upper starboard saloon berth - leg hinged forward to give more room or better stow in the cockpit overnight.